

GLASS SHOP SUPPLIES

(ILLUSTRATIONS ACTUAL SIZE)

Sec. 17



15466

(20160591)
Nylon

Front Door Window Guide
Upper Part Of Glass
LeSabre 90-80 & Electra 84-On;
Fleetwood Brougham &
DeVille 83-On; Impala &
Caprice 90-80 &
Cavalier 87; Delta 88 & Custom
Cruiser 90-80 & 98 Regency 84-80;
Parisienne & Safari 89-81 &
Sunbird 87

UNIT PACKAGE: 25



15467

(10051034, 20123070,
20328600)
Nylon

Front & Rear Door Window Guide
Electra, Estate Wagon, LeSabre &
Skylark; DeVille; Impala Wagon,
Caprice & Citation; Delta 88, Custom
Cruiser, 98 Regency & Omega;
Catalina, Safari & Phoenix 81-80

UNIT PACKAGE: 25



Not Actual
Size

17159

(20747509)
Nylon

Front Door Window Guide
Rear Of Glass
Buick Electra & LeSabre
Cadillac Fleetwood/DeVile
Olds Delta & Regency
Pontiac Bonneville
1985-On

UNIT PACKAGE: 15




Not Actual
Size

17341

(12337898, 20747508)
Nylon

Front Door Window Guide
Front Of Glass
Buick Electra, LeSabre & Park Ave.,
Cadillac Fleetwood & DeVille, Olds
88 Royal & 98 Regency, Pontiac
Bonneville 1985-On

UNIT PACKAGE: 15

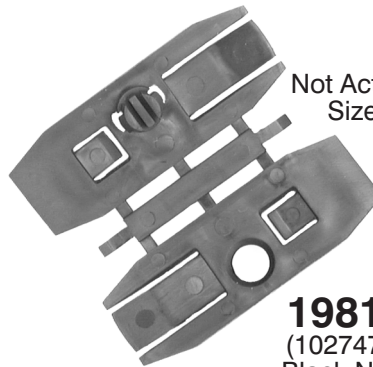


Not Actual
Size

19819

(10274778)
Black Nylon

Front Side Door Window Guide
Chevrolet Venture APV,
Oldsmobile Silhouette APV,
Pontiac Montana &
Trans Sport APV
1997 - On

UNIT PACKAGE: 10

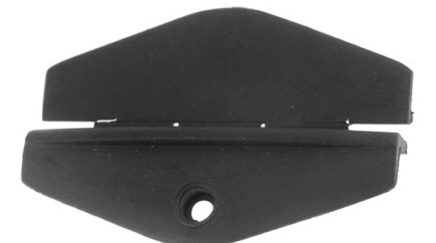

17455

(20493450)
Nylon

Rear Door Window Guide
Upper Glass
Chevrolet Corsica
1987-On

UNIT PACKAGE: 15



17176

(20162174, 22543363)
Nylon

Front Door Window Guide
Buick Skyhawk, Cadillac Cimmaron,
Chevrolet Cavalier, Olds Firenza &
Pontiac Sunbird
1982-On

UNIT PACKAGE: 25



Not Actual Size

18113

(69951-12180)
Nylon With

Steel Treaded Insert

Glass Mount
M6-1.0 Thread
Nissan, Ford & Imports

UNIT PACKAGE: 5