



21396

(1H0-853-858-A)

White Nylon

With Blue Rubber Grommet

Quarter Panel

Moulding Clip

Width: 23mm


Length: 40mm

Stem Length: 11mm

Audi & VW Cabrio, Golf & Jetta

2002 – 1993

UNIT PACKAGE: 15

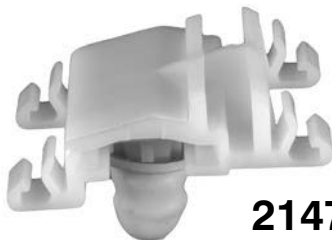

21478

(3A0-853-575)

White & Orange

Nylon With Blue

Rubber Boot

Door, Fender & Quarter Panel

Moulding Clip

Width: 35mm

Length: 38mm

Stem Length: 14mm

Volkswagen

1997 – 90

UNIT PACKAGE: 15



13173

(VW: N14389.3;

Volvo: 3104-426)

Metal

Door Panel Clip

Use With 13206

UNIT PACKAGE: 50



13176

(113-853-585B)

Metal

Moulding Clip

UNIT PACKAGE: 25



8843

Nylon

Moulding Fastener

Fits 1/2" -5/8" Mouldings

UNIT PACKAGE: 50



21498

(191-941-142)

White Nylon

Headlight Adjusting Nut

Head Size: 14mm x 18.5mm

Overall Length: 15mm

Fits Into 10mm Hole

Audi 100 and VW Golf

1994 – 86

UNIT PACKAGE: 25



14014

(VW: 175-853-674;

GM: 20475950)

Black Nylon

Air Vent Nut

Use With 14013 Screw

UNIT PACKAGE: 50



12735

(GM: 1370853;

Chry: 6029501;

VW: 179-813-883)

Nylon

Headlight Bezel Nut

#6 Screw Size

GM & VW

1982-On

UNIT PACKAGE: 50



14030

(GM: 3997391;

VW: 179-813-881)

Black Nylon

Tail Light Nut

#8 Screw Size

GM Astro & Safari

1985-On

Volkswagen

UNIT PACKAGE: 25



21510

(867-809-966, 811-807-557-C)

Black Nylon

Screw Grommet

M4.8 (#10) Screw Size

Head Diameter: 12mm

Stem Length: 12.5mm

VW & Audi

UNIT PACKAGE: 25



21480

(VW: 165-827-592)

Natural Nylon

Screw Grommet

M4.2 (#8) Screw Size

Head Diameter: 11mm

Stem Length: 13mm

VW Cabrio, EuroVan, Golf

& Jetta

2003 – 1992

UNIT PACKAGE: 25



20924

(N908-338-01)

Black Nylon

Fender Apron Screw Grommet

M4.2 (#8) Screw Size

Head Dia: 15mm

Stem Length: 12mm

Cabrio, Golf, Jetta &

Phaeton

1999 - On

UNIT PACKAGE: 15