


# COMPRESSION BATTERY CABLE TERMINALS


All clamps and lugs are made of cast copper • All clamps, lugs and fasteners are tin plated

Assemble with common hand tools.

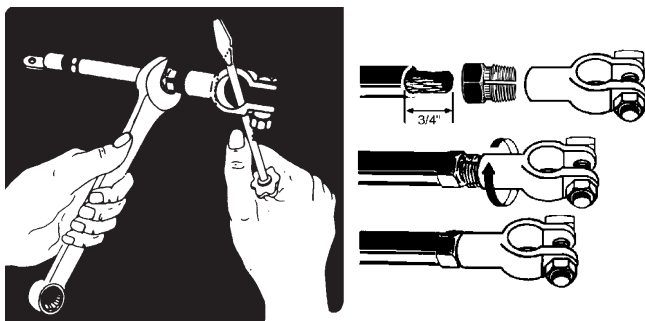

### Three Easy Steps


1. Strip 3/4" of insulation from the end of the cable. Insert bared wire into the compression nut.
2. Thread terminal on compression nut.
3. Grip compression nut with wrench and turn the terminal until the compression nut seats. With larger gauges you may want to hold the terminal in a vise.

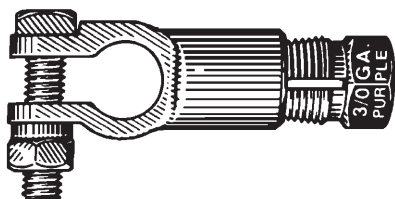

### Straight Clamp

Auveco Cable Part No.	Gauge	Desc.	Color	Unit Pkg.
15603	....4	.....Pos.	.....Gray	.....2
15605	....1&2	.....Pos.	.....Green	.....2
15606	....1/0	.....Neg.	.....Black	.....2
15607	....1/0	.....Pos.	.....Black	.....2
15608	....2/0	.....Neg.	.....Orange	.....2
15609	....2/0	.....Pos.	.....Orange	.....2
15610	....3/0	.....Neg.	.....Purple	.....2
15611	....3/0	.....Pos.	.....Purple	.....2

### Flag Clamp

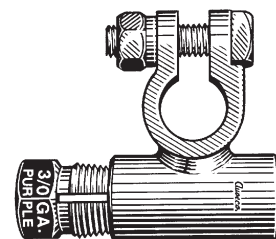

Auveco Cable Part No.	Gauge	Desc.	Color	Unit Pkg.
15613	....1/0	.....Pos.	.....Black	.....2
15615	....2/0	.....Pos.	.....Orange	.....2



### Stud/Side Terminal

Auveco Part No.	Cable Gauge	Color	Unit Pkg.
15628	.....1/0	.....Black	.....2



### Heavy Wall Copper Lug

Auveco Cable Part No.	Gauge	Hole Size	Color	Unit Pkg.
15618	....4	.....3/8"	.....Gray	.....2
15619	....1&2	.....3/8"	.....Green	.....2
15620	....1/0	.....3/8"	.....Black	.....2
15621	....1/0	.....1/2"	.....Black	.....2
15622	....2/0	.....3/8"	.....Orange	.....2
15624	....3/0	.....3/8"	.....Purple	.....2
15625	....3/0	.....1/2"	.....Purple	.....2

### Compression Nut



Auveco Part No.	Cable Gauge	Color	Unit Pkg.
15632	.....2/0	.....Orange	.....5